


# Portable UVC Sterilizer

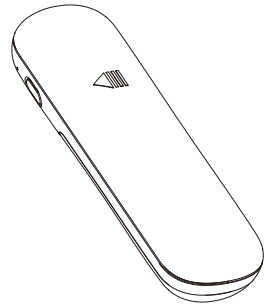

MODEL:UV-007  
www.uk-uv.co.uk




## WARNING

1. Keep device away from contact with one's eyes and skin.
2. Ensure that device is used only for its intended purpose: cleaning keyboards, tablet PCs, mobile phones, toilet seats, table tops, door knobs, cutting boards, kitchen utensils and other surfaces etc. Any other usage is NOT recommended by the manufacturer and may cause damage to the user or device.
3. Refrain from operating the device if it:
  - a. Has malfunctioned
  - b. Has been damaged
4. Never use detergents, gasoline, furniture polish, or any other household cleaning product to clean any part of the device.

## 2. Effects of Sterilization

Through UV Irradiation, the DNA structure of a single celled virus will be damaged. This will lead to the virus's immediate death or loss of reproductivity. It generally takes 10 seconds or more for the effects of sterilization to kick in. It has been proven that ultraviolet light can destroy bacteria, fungi, virus, and unicellular algae.

## 3. Quick Overview

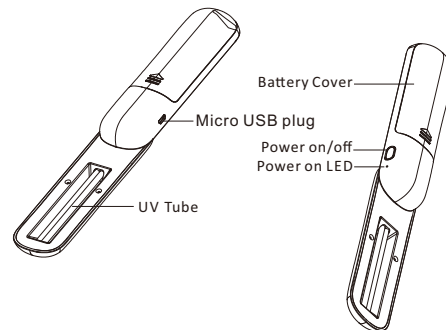

## 1. Safety Notice

To ensure safety and proper usage of this product, please consult this instruction manual before initial use.

## NOTICE

1. Do not drop the device.
2. Place device away from water or any type of liquid.
3. Keep device away from children and pets.
4. Use a dry and soft clean cloth to wipe the device.

## 4. Battery installation

1. Open battery cover by pulling in the same direction as the arrows.
2. Place batteries according to  $\oplus$  and  $\ominus$ .
3. Close battery cover.
4. The Micro USB plug cannot be used for recharging. If batteries are not installed, please use a Micro USB wire to power the device,

## 5. Operation


### 5-1: Safe Operation

## CAUTION

- 1. Do not expose your skin and eyes to the UV light.
- 1. The Micro USB plug cannot be used for recharging.

### 5-2: Power On/Off

- Press the Power On/Off button 3 seconds on the device and the power LED light will turn blue (With safety switch design protection).

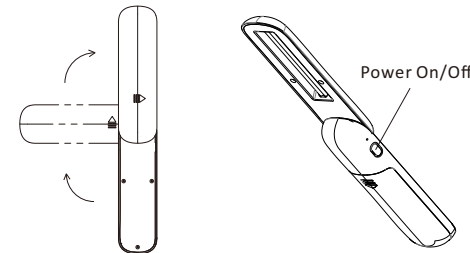


## 6. Sterilization Method


## CAUTION

- 1. Please prevent the UV tube from colliding or coming into contact with hard objects. Doing so will cause damage to the UV tube.

1. Hold the sterilizer in your hand with the light facing downward. Move the sterilizer slowly across the target surface for about 10-15 seconds or more.

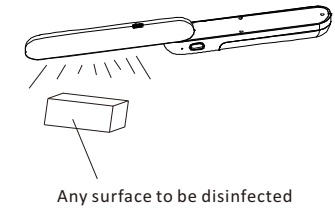

2. Safety Feature: The device will automatically shut off if the sterilizer has been turned over (bulb facing up). The sterilizer will resume working once it is open and the bulb facing is down.

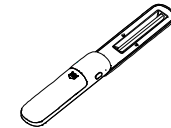

3. The UV sterilizer can effectively eliminate bacteria.

**Do NOT expose eyes or skin to the UV light.**

## 7. Specifications

Lifetime	~20000 hours
Power Supply	4xAAA batterle or USB Power Source
Rated Power	3W(Max)
Battery working Life	3 hours $\pm$ 10%
Work Temperature	-10-45°C
Dimenslons	143x40.3x28.6mm
Weight	70g(Excl. batterles)

<https://www.uk-uv.co.uk/>